



Nixie Clock with 4 IN-14 Tubes

Model #'s NC-IN14-4-ACRYLIC, NC-IN14-4-WOOD

Instructions

Facing the back of the clock there are two buttons that will set the time and features of the clock. The left button will activate each step of the time setting while the right button will alter it. To move through the following chart you would press the left button once, then press the right button to set the hour, press the button key once again, the right button to set the minutes, the left button again et cetera. To reach a certain step immediately, press the left key x times, then x more times to save settings (i.e. to set the blue lights press the left button seven times, then the right button to trigger on/off, then press the left button two more times to save settings).

Step - Function

- 1 - Set the hour (default 24 hours for user friendly time setting)
- 2 - Set the minutes
- 3 - Set the day of the month
- 4 - Set the month
- 5 - Set the year
- 6 - Trigger clock type, **00** for *24 hour*, **01** for *12 hour*
- 7 - Trigger blue LEDs, **00** for *OFF*, **01** for *ON*
- 8 - Trigger date display (cycles through), **00** for *OFF*, **01** for *ON*
- 9 - Save Settings (when pressed, the seconds counter will reset to zero for accuracy of time setting)