




Hex Head screw, 1/4"- 20 tpi x 3" length

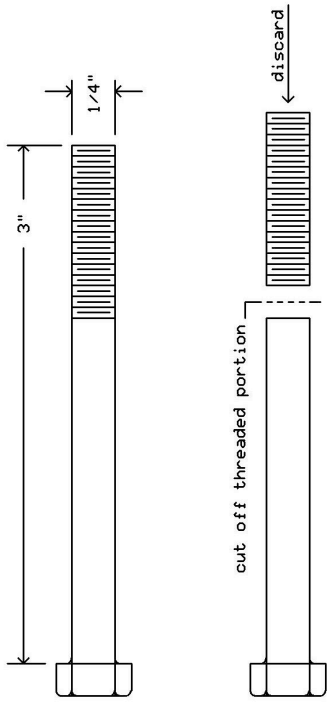

file end of shaft flat and smooth




drill 1/8" hole down center of shaft 3/8" deep



## Turret Setter

|                   |                       |
|-------------------|-----------------------|
| TubeDepot.com     |                       |
| DIY Turret Setter |                       |
| Robert Hull       | Rev 1.0<br>12/14/2009 |
| Page # or name    |                       |

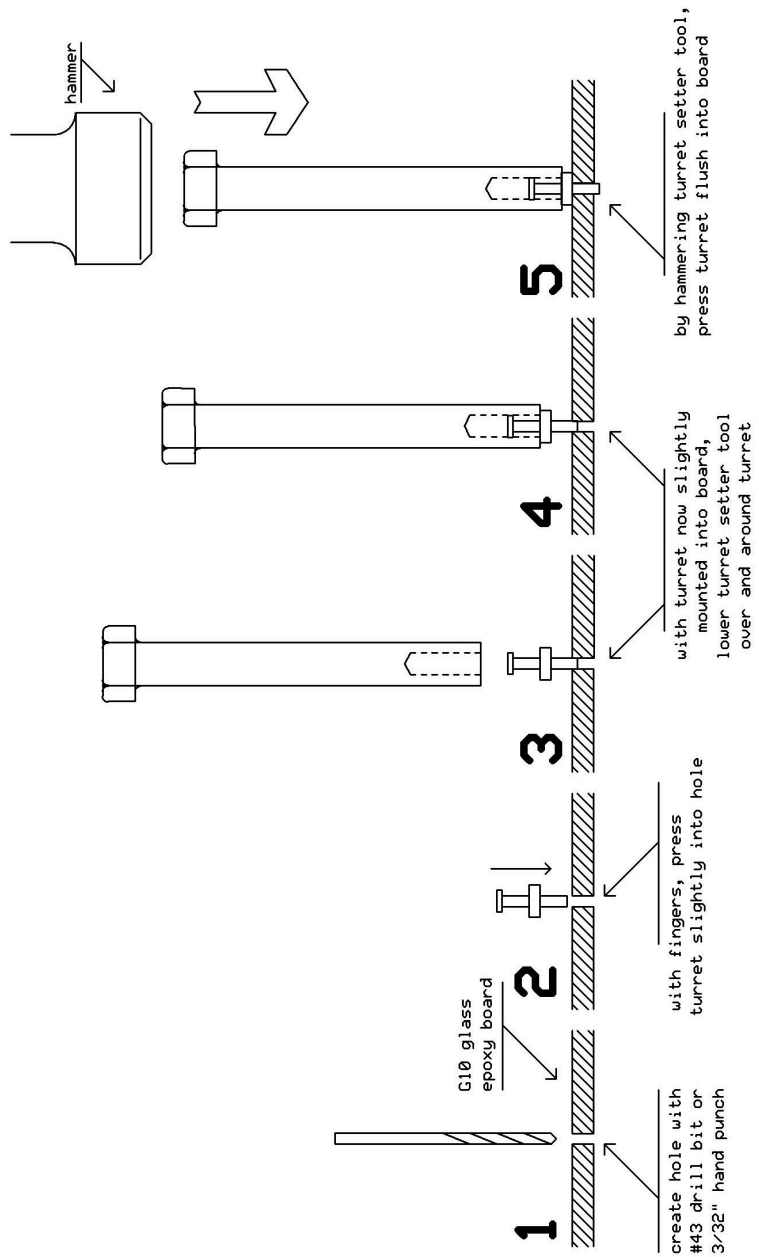

note:  
 When press fitting turrets into the G10 glass epoxy board, it is important to work on a soft, rubberized work surface. A soft surface will allow the ends of the turrets to extend beyond the underside of the board unobstructed.