
# Channel ACTION ALERT!



NO: SW-065 PRODUCT: A22E\_ Emergency Stop Switches

DATE: February 2010 TYPE: Modification Notice

# All A22E Emergency Stop Switches Now Shipped with the Lock Plate to Improve Safety

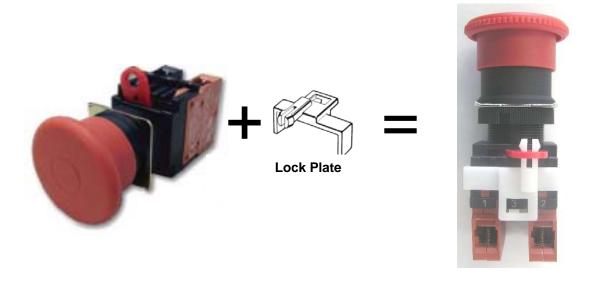

Previously, the A22Z-3380 Lock Plate was available as an accessory to be ordered separately; however, to improve the safety of the switch by protecting it against accidental or unintended removal, the locking plate is now shipped with all A22E\_ Emergency Stop Switches. The change started in Japan in February 2008 and has rolled out worldwide as stock turned over.

## **Availability of Newer Models**

Inventory of all existing models has been verifed and new models will begin shipping immediately with the Lock Plate included with Assembled A22E Emergency Stop Switches and with the Operation Units.

### **Design Change Details**


#### **Before modification**



#### After modification

#### 1) Assembled Units


Lock Plate was not shipped with the product. \*It was possible to order Lock Plate separately as an accessory (Model A22Z-3380), if necessary.

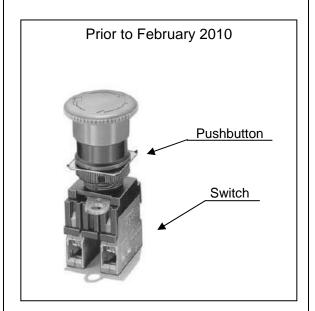

#### 1) Assembled Units

Lock Plate is now shipped with the product.

\*It is possible to order Lock Plate separately as an accessory (Model A22Z-3380), if necessary.

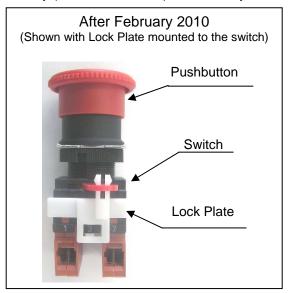

\*When A22E is shipped from the factory the Lock Plate is NOT mounted to the switch. It is shipped with the product in the packing case.


#### 2) Operation Unit

Lock Plate was not shipped with the product.



#### 2) Operation Unit

Lock Plate is now shipped with the product.

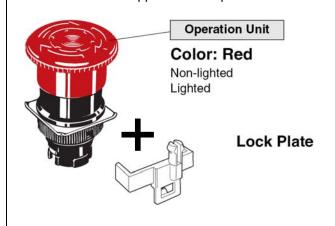

## **Applicable Models**

## 1) Assembled Units

Model	Model	Model
A22E-SK-11	A22E-MP-01	A22E-LP-02
A22E-SK-02	A22E-MK-22X	A22E-LP-01
A22E-SK-01	A22E-MK-11	A22EL-M-T2-11
A22E-S-20	A22E-MK-02	A22EL-M-T2-02
A22E-S-12	A22E-MK-01	A22EL-M-T2-01
A22E-S-11	A22E-M-20	A22EL-M-T1-11
A22E-S-10	A22E-M-12B	A22EL-M-T1-02
A22E-S-03	A22E-M-12	A22EL-M-T1-01
A22E-S-02	A22E-M-11B	A22EL-M-24A-11B
A22E-S-01S	A22E-M-11	A22EL-M-24A-11
A22E-S-01	A22E-M-10	A22EL-M-24A-02
A22E-MY-11	A22E-M-03	A22EL-M-24A-01
A22E-MP-20	A22E-M-02B	A22EL-M-12A-11
A22E-MP-12B	A22E-M-02	A22EL-M-12A-02
A22E-MP-12	A22E-M-01S	A22EL-M-12A-01
A22E-MP-11	A22E-M-01B	A22E-L-11
A22E-MP-10	A22E-M-01	A22E-L-02
A22E-MP-02	A22E-LP-11	A22E-L-01

## 2) Related part numbers (Pushbutton)

Model
A22E-SK
A22E-S
A22E-MP
A22E-MK
A22E-M
A22E-LP
A22EL-M
A22E-L

### **Additional Information**

## **Mounting the Lock Plate**

- 1. Confirm that the lever on the Mounting Latch is on the side where the Operation Unit is secured and then insert the protrusion on the Lock Plate into the hole in the lever on the Mounting Latch.
- **2.** Press the hole on the Lock Plate onto the protrusion on the Mounting Latch until it clicks into place.

