

HEG.0B.304.CLNPV

SUMMARY

Wires

Low voltage 4



Image is for illustrative purpose only

Series 0B

Termination type Female print PCB
IP rating 68 when mated
AWG wire size 30.00 - 22.00
Cable Ø 0.00 - 0.00 mm

Status active

Matching parts FGG.0B.304.CLAD22

Download

Request a quote
PCB Eagle Pattern
PCB Altium Pattern
PCB KiCad Pattern

Catalog

TECHNICAL DETAILS

Mechanics

Shell Style/Model HE*: Fixed receptacle, nut fixing, watertight or vacuum-tight (back panel mounting)

Keying 1 key (alpha=0, plug: male contacts, receptacle: female contacts)

Housing Material

Brass (chrome plated [SAE AMS 2460]) shell and collet nut, nickel plated [SAE AMS QQ N 290]

brass latch sleeve and mid pieces

Variant PV: Watertight / Vacuum-tested unmated

Weight 5.59 g

Performance

Configuration 0B.304 : 4 Low Voltage Insulator L: PEEK (UL 94 / V-0/1.5)

Rated Current 7 Amps

Specifications

Contact Type: Print (straight)
Contact Dia.: 0.7 mm (0.028in)

R (max): 6.1 mOhm

Vtest (contact-contact): 850 V (AC), 1200 V (DC) Vtest (contact-shell): 700 V (AC), 990 V (DC)

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.

Others

Endurance (Shell): 5000

Temp (min / max): -20° C / $+100^{\circ}$ C

Humidity (max): <=95% [at 60 deg C /140 F]


Vibration: 15 g [10 Hz - 2000 Hz] Shock Resistance: 100 g [6 ms] Climatical Category: 20/80/21 Shielding (min): 75 dB (10 MHz) Shielding (min): 40 dB (1 GHz)

R leak (He) (max): 0.0000001 mbar*l/s (if vacuum-tested)

Salt Spray Corrosion: >1000 hr

Pressure: 60 bars

DRAWINGS

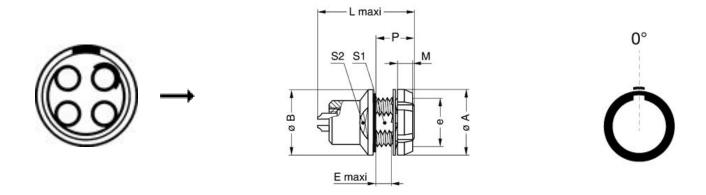

Dimensions

	А	В	E	L	М	Р	S1	e
mm.	12	13	5.5	19.5	2.5	9.0	8.2	M9x0.6
in.	0,47	0,51	0,22	0,77	0,10	0,35	0,32	

RECOMMENDED BY LEMO

Tools

Spanner wrench: Socket for torque wrench DCM.0S.M09.4

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.

