


	A	B	C
9 POSITION	0.565 [14.35]	0.410 [10.41]	0.256 [6.50]
15 POSITION	0.715 [18.16]	0.560 [14.22]	0.256 [6.50]
25 POSITION	0.965 [24.51]	0.810 [20.57]	0.256 [6.50]

TOLERANCE = +0.010/-0.000 inch

This panel cut out instruction sheet is to be used only when mating:
 NorComp 380 Series males connectors to NorComp 960 Series kit OR NorComp CCA-YYY-YYR152 cables
 (NorComp 160-380-001R031 hardware intended to be used here)
 NorComp 381 Series male connectors to NorComp 960 Series kit OR NorComp CCA-YYY-YYR152 cables
 NorComp does not provide a cable mate solution for the 380 Series female connectors

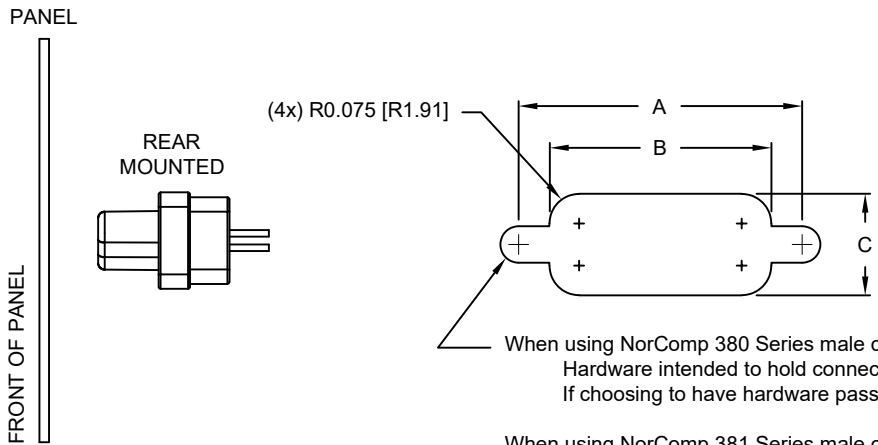

When using NorComp 380 Series male connector => (2x) Ø0.108 +0.005/-0.000 [2.74]
 Hardware intended to hold connector to panel; max panel thickness of 0.020 [0.05]
 If choosing to have hardware pass through panel; use dimensions below for NorComp 381 Series

When using NorComp 381 Series male connector => (2x) Ø0.145 +0.010/-0.000 [3.68]
 Hardware intended to pass through panel

Distance between mating connector flanges should be 0.305 [7.75] nominally

These dimensions are recommended but may not suit all applications.
 If you have any questions regarding these dimensions please reach out to eng@norcomp.net

RoHS COMPLIANT

UNITS = inch [mm] DO NOT SCALE FROM DRAWING

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	DRAWN: J. KADEL
		DATE: 04/02/2020

	SCALE: NTS	SHEET 1 OF 1	REV 3
	DWG NO. Panel Cutout Micro-D		