




Application Tooling Specification Sheet

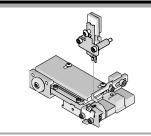

Order No. 63912-5900

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements


SCOPE

<u>Products:</u> 1.20mm (0.47") Pitch Pico-EZmate[™] Wire-to-Board Crimp Terminal, 28-30 AWG.

Terminal		Wire Size		Insulation Diameter				Strip Length	
Series No.	Terminal Order No.			IPC/WHMA-A620 (1)		Terminal (2)		J	
		AWG	mm²	mm	ln.	mm	ln.	mm	ln.
×78172	78172-0410	28-30	0.08-0.05	0.50-0.70	.020028	0.50.0.70	020 020	0.90-1.30	.035051
	78172-0411					0.50-0.70	.020026		

- × Oiler is required for this applicator due to gold plating on terminal. Oiler order number 63801-7240 (See Part Number 63801-7240 on Molex Web)
- (1) To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.
- (2) Overall insulation OD specification for terminal.

DEFINITION OF TERMS

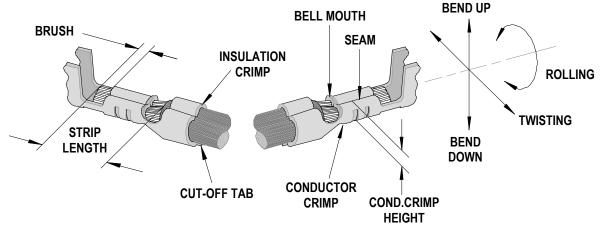

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

UNCONTROLLED COPY Doc No: ATS-639125900 Release Date: 10-06-14 Page 1 of 6

Revision Date: 12-14-16 Revision: B

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off Tak	Maximum	Conductor Brush	
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.
78172	0.05-0.15	.002006	0.05	.002	0.15-0.70	.006028

Terminal Series No.		Bend up Bend down		Bend up Bend down Twist Roll Punch Width mm (Re		Ref)	Seam			
		Dograo		Dograo		Conductor		Insulation		Seam shall not be
Series	5 NO.	Degree		Degree		mm	In	mm	ln	open and no wire allowed
781	72	3	3	2	3	0.80	.031	0.80	.031	out of the crimping area

After crimping, the conductor profile should measure the following.

	Wire	Size		Conducto	r Crimp	Pull Force		
Terminal Series No.	AWG	mm²	Crimp	Height	Crimp Wi	Minimum		
	AVVG	IIIIII	mm	ln.	mm	ln.	N	Lb.
78172	28	0.08	0.44-0.48	.017019	0.85	.033	10.0	2.25
70172	30	0.05	0.40-0.44	.015017	0.85	.033	5.0	1.12

	Wire	Size		Insulation				
Terminal Order No.	AWG	mm²	Crimp	Crimp Wi	np Width (Ref.)			
			mm	ln.	mm	ln.		
78172-0410	28	0.08	0.73-0.77	.028030	0.85	.033		
70172-0410	30	0.05	0.71-0.75	.027029	0.85	.033		
78172-0411	28	0.08	0.77-0.81	.030032	0.85	.033		
70172-0411	30	0.05	0.75-0.79	.029031	0.85	.033		

Tool Qualification Notes:

1. Pull Force should be measured with no influence from the insulation crimp.

2. The above specifications are guidelines to an optimum crimp.


UNCONTROLLED COPY Doc No: ATS-639125900 Page 2 of 6 Release Date: 10-06-14 Revision: B

PARTS LIST

	T2 Terminator 63912-5900									
Item	Order No	Engineering No.	Description	Quantity						
		Perishabl	e Tooling							
	63912-5970	63912-5970	Tool Kit (All "Y" Items)	REF						
1	63457-0046	63457-0046	Conductor Punch	1 Y						
2	63455-0059	63455-0059	Conductor Anvil	1 Y						
3	63454-0082	63454-0082	Insulation Punch	1 Y						
4	63456-0054	63456-0054	Insulation Anvil	1 Y						
5	63443-0003	63443-0003	Front Cut-Off Plunger	1 Y						
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y						
		Other Cor	nponents							
7	11-24-1067	4996-4	Cut-off Plunger Spring	1						
8	63443-0009	63443-0009	Scrap Chute	1						
9	63443-0025	63443-0025	Key	1						
10	63443-0085	63443-0085	Wire Stop L-Bracket	1						
11	63443-0090	63443-0090	Wire Stop	1						
12	63443-2217	63443-2217	Coarse Spacer (17.00mm)	2						
13	63443-2314	63443-2314	Fine Spacer (3.70mm)	1						
14	63443-2805	63443-2805	Front Plunger Striker	1						
15	63443-2902	63443-2902	Hold Down Plunger	1						
16	63443-6017	63443-6017	Rear Cover	1						
17	63443-7201	63443-7201	Spring Cover	1						
18	63600-0021	63600-0021	Compression Spring	1						
19	63600-2972	63600-2972	Collar	2						
20	63890-0058	63890-0058	Height Spacer	1						
21	63901-1301	63901-1301	Feed Guide	1						
		Fra	me							
22	63800-8800	63800-8800	T2 Terminator	1						
		Hard	ware							
23	N/A	N/A	M3 by 6 Long SHCS	2**						
24	N/A	N/A	M3 by 6 Long FHCS	1**						
25	N/A	N/A	M4 by 6 Long SHCS	2**						
26	N/A	N/A	M4 by 12 Long BHCS	2**						
27	N/A	N/A	M4 by 14 Long SHCS	2**						
28	N/A	N/A	M4 by 30 Long SHCS	2**						
29	N/A	N/A	M4 by 50 Long SHCS	2**						
30	N/A	N/A	M5 by 12 Long SHCS	1**						
31	N/A	N/A	#10-32 by 3/8"Long BHCS	1**						
** Av	** Available from an industrial supply company such as MSC (1-800-645-7270).									

Doc No: ATS-639125900 Release Date: 10-06-14 **UNCONTROLLED COPY** Page 3 of 6

Revision: B Revision Date: 12-14-16

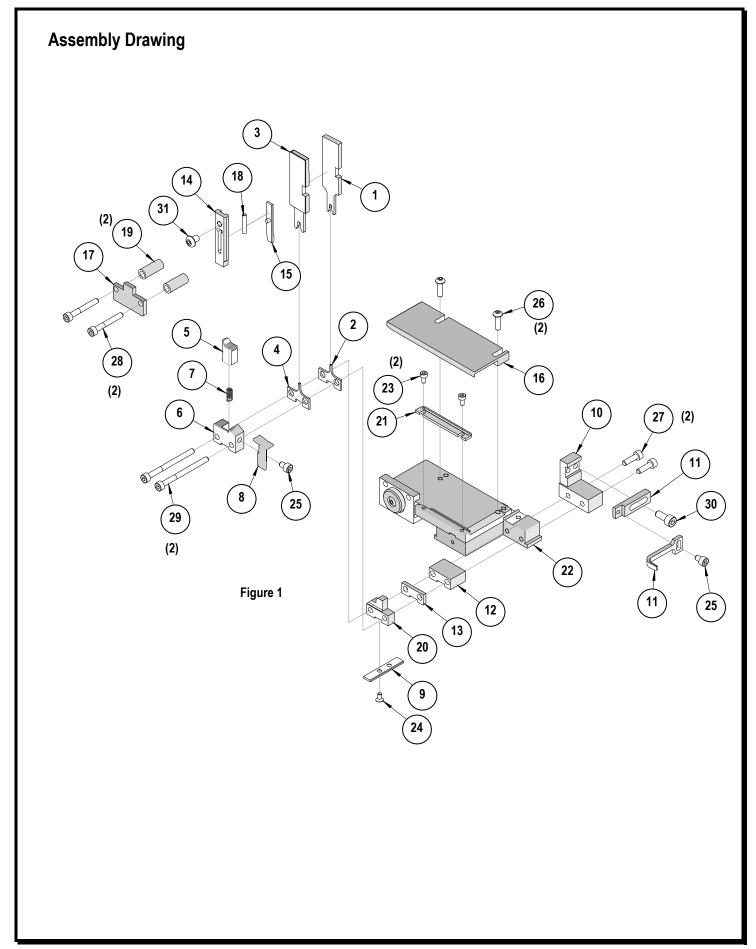

Doc No: ATS-639125900 Revision: B Release Date: 10-06-14 Revision Date: 12-14-16

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

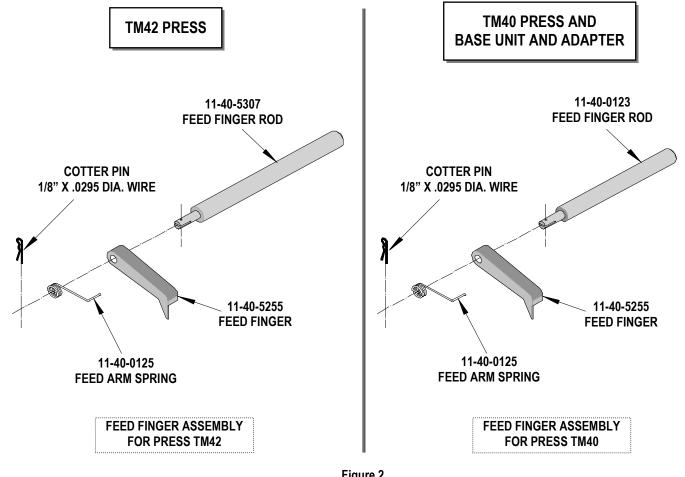


Figure 2

UNCONTROLLED COPY Doc No: ATS-639125900 Release Date: 10-06-14 Page 5 of 6 Revision Date: 12-14-16

Revision: B

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tiaht.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Visit our Web site at http://www.molex.com

UNCONTROLLED COPY Doc No: ATS-639125900 Release Date: 10-06-14 Page 6 of 6 Revision Date: 12-14-16

Revision: B